



ISUZU DMAX 2017+ LOWER GRILLE INSTALL

ANLEITUNG
INSTRUCTIONS
INSTRUCTIONS
INSTRUCCIONES



TECHNICAL SUPPORT

aaron@lazerlamps.com / sales@lazerlamps.com +44 (0)1992 945601 / +44 (0)1992 677374


WHAT'S REQUIRED

- 2x ST4 Evolution
- 1x Two Lamp Harness Kit
- 1x Isuzu Dmax ST4 Mounting Kit

DIFFICULTY LEVEL




TOOLS REQUIRED

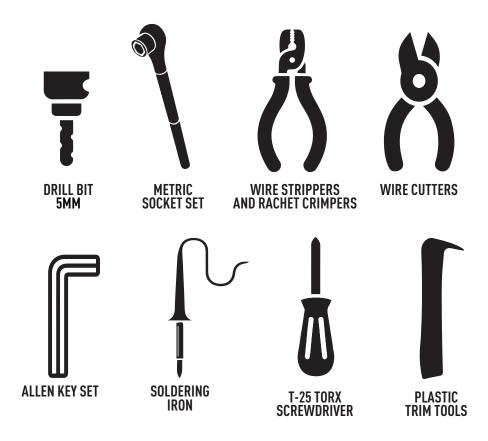



PRE-INSTALLATION CHECKS

1. Ensure battery is disconnected.

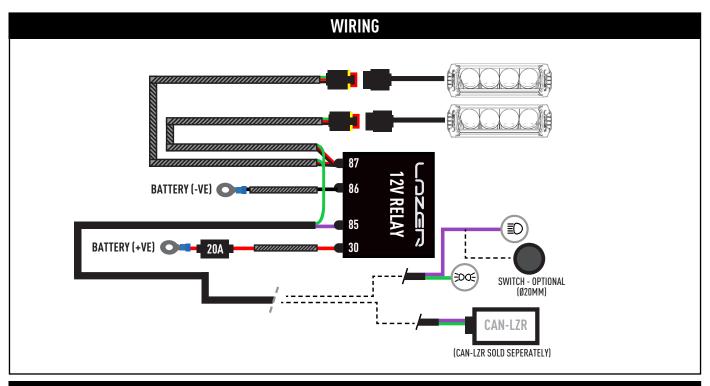

STEP 1

Locate the headlamp high beam wire which has positive voltage going to the bulb (not the ground wire coming back from the bulb!).

STEP 2

Cut the vehicle high beam wire approximately 100mm from the connector, strip wire ends 7mm and twist strands.

STEP 3

Strip wire end from Lazer wiring harness (p/n 2L-LP-120/2L-LP-PL-120), from relay position 85





STEP 4

Connect all high beam wires from the wiring harness to the pink wire from the back of the left headlight plug using supplied butt connectors.



STEP 5

Connect ground wire from harness to grounding point in engine bay (or on -ve battery terminal).

STEP 6

Connect fused wire to positive terminal on battery. Cable-tie loose wires as required.




STEP 7

Locate relay as pictured:


MOUNTING YOUR LIGHTS

(These fitting instructions relate to installation of Lazer ST4 Evolution spotlights in the lower grille of the MY17 D-max. Guide-lines for mounting lights on older models are available on request from: sales@lazerlamps.com)

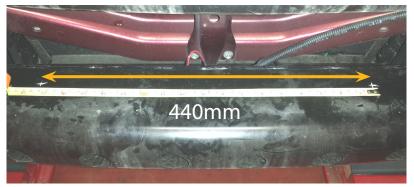

STEP 1

Remove bumper fascia, then mark the drill holes for the lamps at 440mm apart, symmetrical about the centre point of the bumper beam bar.

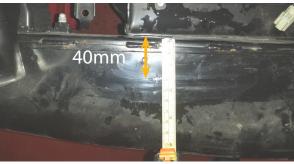

STEP 2

Mark 40mm from the rear.

STEP 3

Attach Riv-nut into bumper beam holes - this might require temporary removal of the upper beam bar.





STEP 4

Fix the lamp mount on to lamp with the orientation shown.



STEP 5

Use M8 x 25mm socket cap head to screw lamp on to bumper beam (note M8 hex head bolt supplied in bracket bag can be discarded when using the riv-nut fastening method).

STEP 6

Aim lights, check functionality and tighten, before re-attaching bumper fascia to the vehicle.

TROUBLE SHOOTING

ISSUE: Lamps don't illuminate after wiring system.

- Check that the High Beam wire carrying +ve voltage has been selected, and not the ground wire coming from the bulb.
- Check fuse in harness.
- Check that relay is switching. If not, check there is +ve voltage at relay when main beam lights are activated. If not, then check splice.



WWW.LAZERLAMPS.COM

+44 (0)1992 677374 sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre, Riverway, Harlow, Essex. CM20 2FD. United Kingdom





