

H

G

Н

Ρ

Ε

R

FORM

G

Ν

(FOR VEHICLES WITHOUT ROOF RAILS)

**FITTING INSTRUCTIONS** 



### **TECHNICAL SUPPORT**

aaron@lazerlamps.com / sales@lazerlamps.com +44 (0)1992 945601 / +44 (0)1992 677374

## WHAT'S INCLUDED

- 2x Stainless Steel Mounting Bracket (LH/RH) •
- 1x Anti-Theft Fastener Set (Various Sizes) •
- 1x Spacer Set •
- 4x M6 Security Fasteners •
- 4x M8 Roof Ditch Spacers •

# **DIFFICULTY LEVEL**



### **TOOLS REQUIRED**









METRIC Socket Set

PLASTIC TRIM TOOLS







**WIRE CUTTERS** 



### **PRE-INSTALLATION CHECKS**

Ensure battery is disconnected.

INSTALLATION	
	STEP 1 Install the relay from the wiring harness.
	STEP 2 Connect the live from the wiring harness.
	STEP 3 Connect the earth from the wiring harness.
	STEP 4 Unscrew the clips and remove the scuttle panel trim.











moving parts.



Feed the cable across the scuttle panel ensuring the cable is secured with cable ties and away from any

#### STEP 6

Remove the lower trim panel using a plastic trim tool, this will reveal a T30 torx screw.

#### STEP 7



Undo the T30 torx screw.



Slide the A pilar trim downwards.



Trim can now be removed



run the wiring harness cable up the 'A' pillar, and cut the plug.





## STEP 8

Remove the front rubber protection caps.

#### STEP 9

To reveal the 5 lobe security bolts (2 per side).



STEP 10 Remove bolts using the included extraction bit.
STEP 11 Install the M8X8mm spacers.
STEP 12 Place the brackets on the spacers, lining up the holes.
STEP 13   Install the included bolts to secure the brackets to the roof.
STEP 14 Secure the lamp to the roof using the included spacers and security bolts.











Connect the Lazer harness to the lamp and tidy the wiring.

If installing a switch, please run the switch cable through the factory grommet on the drivers side of the vehicle.



#### STEP 22

Mount the switch in a suitable location.



### STEP 23

Plug in the lamp and tidy any loose wiring.

Test lamp is working correctly before re-assembling vehicle.



# WWW.LAZERLAMPS.COM

+44 (0)1992 677374 sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre, Riverway, Harlow, Essex. CM20 2FD. United Kingdom

