

FORD F150 AND F150 RAPTOR (2021+) A-PILLAR MOUNTING KIT



WHAT'S INCLUDED

- 2x A Pillar Mounting Brackets
- Fixtures
- Fitting Instructions

TOOLS REQUIRED

- 10mm Socket
- 13mm socket
- 4mm Allen wrench
- Painters Tape or other
- Pry tool

COMPATIBLE WITH LAMPS:

- RP Series
- Utility-25
- Utility-50
- ST2 Evolution

DIFFICULTY - 2/5



PRE-INSTALLATION CHECKS

Ensure all vehicle systems are fully operational prior to install, and directly afterwards.

Ensure battery is disconnected.

MOUNTING BRACKET INSTALLATION

RP Series shown for illustration purposes.

NOTE: Outermost A-pillar slot must be used when mounting any RP Series lamp due to clearance issues with the passenger-side antenna. If mounting any Utility-25 and ST-2 you may need a bigger washer that isn't included.

CAUTION: Be careful when lifting up edges of windshield cowl to get to upper bolt location.

****It may be easier to remove cowl completely.****



STEP 1

Tape fender area around where you will be working.



STEP 2

Remove 1xM8 OE bolt using a 13mm socket.



STEP 3

Remove 1xM6 OE bolt under hood cowl near top of fender using a 10mm socket.



STEP 4

Slide Triple-R A-pillar bracket into position ensuring you have the light mounting tap on the outside of fender.




STEP 5

Re-install lower bolt into fender using a 13mm socket.



STEP 6

Install upper M6 bolt using a 10mm socket to secure small L-Bracket to the fender.

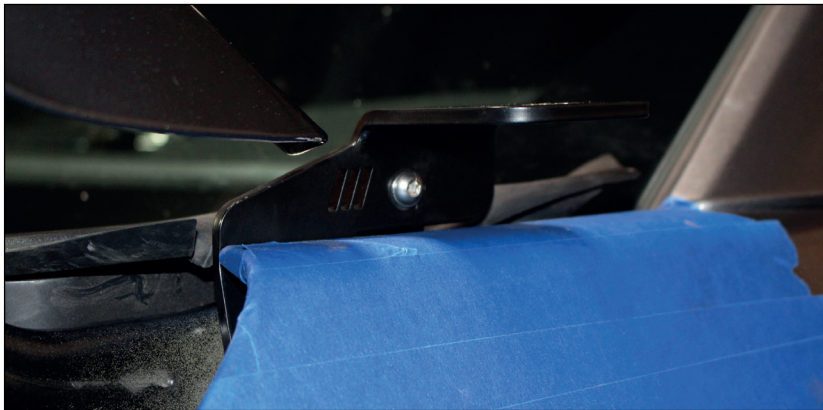

STEP 7

Secure smaller L-bracket to A-pillar bracket using supplied M6 Hardware using a 10mm socket and a 4mm Allen wrench.



STEP 8

Install your Triple-R LED light to the A-pillar bracket using the slot of your choice based on the lamp installed.

STEP 9

Run wiring to desired switch. It is recommended to use the available corresponding Triple-R wiring kit for your product (please refer to the wiring kit product page for further wiring instructions).