



4-WAY RALLY POD FOR CARBON-6 (GEN3)

ASSEMBLY INSTRUCTIONS




STEP 1.



PARTS

1: M6 PENNY WASHER

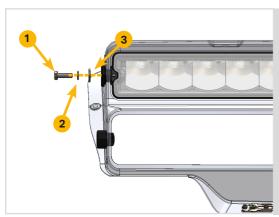


STEP 2.



PARTS

- 1: M6 X 16 HEX BOLT
- 2: M6 SPLIT LOCK WASHER
- 3: M6 PENNY WASHER

RECOMMENDED TIGHTENING TORQUE FOR M6 BOLTS: **5NM**

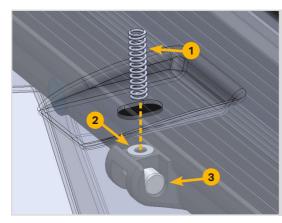


STEP 3. (FINE ADJUSTMENT)




PARTS


- 1: M4 SPRING
- 2: M4 WASHER
- 3: M4 CROSS DOWEL

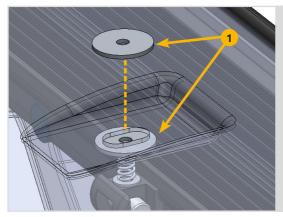


STEP 4. (FINE ADJUSTMENT)



PARTS
1: M4 LARGE WASHER

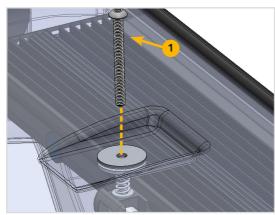

STEP 5. (FINE ADJUSTMENT)



PARTS
1: M4 SOCKET HEAD BOLT



WWW.LAZERLAMPS.COM

+44 (0)1992 677374 sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre, Riverway, Harlow, Essex. CM20 2FD. United Kingdom





