

# LAZER

H I G H P E R F O R M A N C E L I G H T I N G



## LAND ROVER DEFENDER 2020 MOUNTING KIT FOR LINEAR-6

---

**FITTING INSTRUCTIONS**

**ANLEITUNG**

**INSTRUCTIONS**

**INSTRUCCIONES**

## TECHNICAL SUPPORT

aaron@lazerlamps.com / sales@lazerlamps.com  
+44 (0)1992 945601 / +44 (0)1992 677374

## WHAT'S REQUIRED

- 2x LINEAR-6
- 1x TWO LAMP HARNESS KIT
- 1x CANBUS HIGHBEAM INTERFACE (OPTIONAL)
- 1x LAND ROVER DEFENDER, LINEAR-6 (2020+) MOUNTING KIT

## DIFFICULTY LEVEL



## TOOLS REQUIRED



PLASTIC  
TRIM TOOLS



METRIC  
SOCKET SET



WIRE STRIPPERS  
AND RATCHET CRIMPERS



WIRE CUTTERS



DRILL BIT  
5MM



PHILLIPS / TORX  
SCREWDRIVER

## PRE-INSTALLATION CHECKS

1. Ensure battery is disconnected.

## INSTALLATION PROCESS




### STEP 1

Remove 4 trim clips and 4 screws from slam panel cover.




### STEP 2

Remove slam panel cover to access front grille.

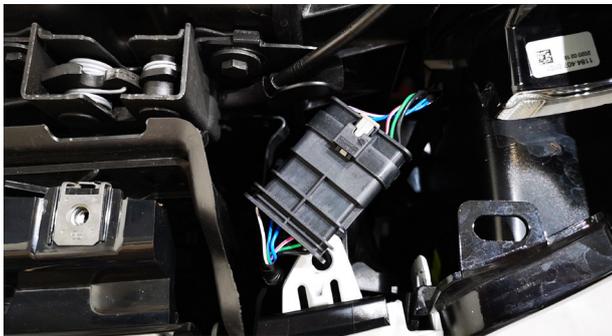

### STEP 3

Unplug radar sensor (do not turn ignition on while this is unplugged).

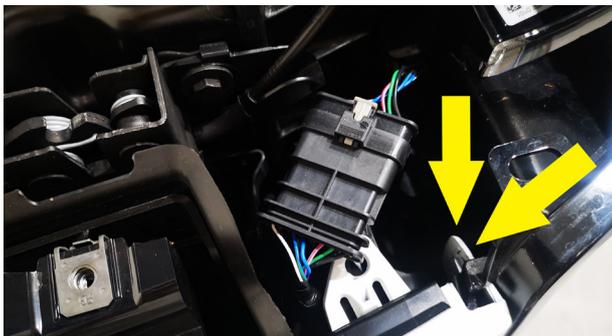

### STEP 4

Locate and undo the 4x latches that hold in the top of the grille. 2x at the top and 2x at the bottom.



### STEP 5

Loosen lower front light cover with plastic trim tool.  
(Both sides)



### STEP 6



Loosen the lower section of the grille and remove the grille surround.



### STEP 7

Undo the 10mm bolt at the side of the headlights (1x each side)



### STEP 8



Install the outboard brackets as shown (1x either side).



### STEP 9



Temporarily install the inboard brackets onto the lamps.



### STEP 10

Temporarily install light to outboard bracket.



### STEP 11



Make sure the lamp is level and drill 5mm hole for the inboard brackets to be riveted into place.



### STEP 12



Rivet the bracket into place. Install the included washer behind the rivet to spread the weight of the lamp.




### STEP 13

Remove the Linear-6 lamps and reassemble the grille onto the vehicle.




### STEP 14

Reinstall the Linear-6 lamps.

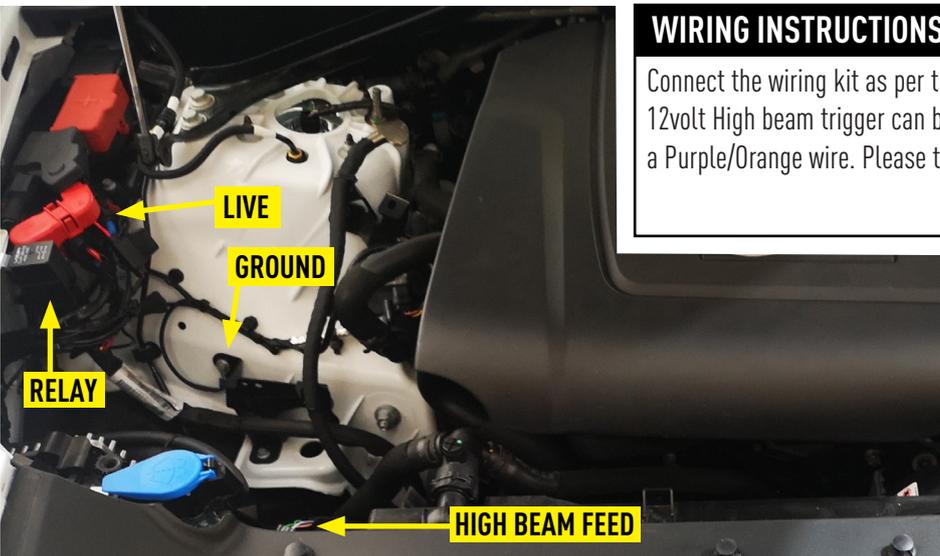

### WIRING INSTRUCTIONS

Connect the wiring kit as per the below. 12volt High beam trigger can be found at the rear of the headlight and is a Purple/Orange wire. Please test before connecting.

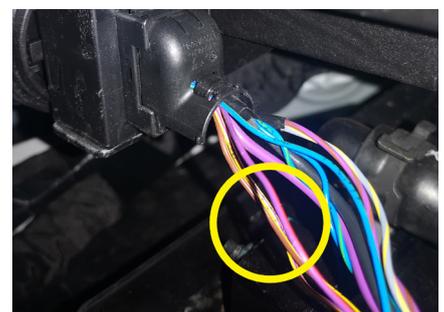



# LAZER

H I G H P E R F O R M A N C E L I G H T I N G

**Thank you for choosing a Lazer Lamps product.**

Vielen Dank dafür, dass Sie sich für ein Produkt von Lazer Lamps entschieden haben.

Merci pour choisir un produit de Lazer Lamps.

Gracias por la seleccion de productos de Lazer Lamps.