

LAZER

H I G H P E R F O R M A N C E L I G H T I N G



MERCEDES SPRINTER (FRONT WHEEL DRIVE) GRILLE INTEGRATION KIT FOR TRIPLE-R 750

FITTING INSTRUCTIONS

ANLEITUNG

INSTRUCTIONS

INSTRUCCIONES

TECHNICAL SUPPORT

aaron@lazerlamps.com / sales@lazerlamps.com
+44 (0)1992 945601 / +44 (0)1992 677374

DIFFICULTY LEVEL



TOOLS REQUIRED



DRILL BIT
3.5MM



SPANNER
10MM



WIRE STRIPPERS
AND RATCHET CRIMPERS



WIRE CUTTERS



HACKSAW




ALLEN KEY
SIZE: 4



PHILLIPS / T-25 TORX
SCREWDRIVER



PLASTIC
TRIM TOOLS

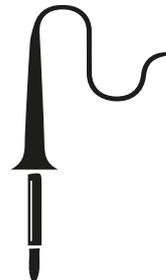

SOLDERING
IRON

STEP 1



Remove the 3x Screws holding in the grille, and remove the front grille.

STEP 2



Remove cover's on both sides that are located behind the grille.

STEP 3



Once both cover's are removed, the grille can be re-installed for the next steps.



STEP 4


Next images show grille off the vehicle, but installation should continue with the grille left on the vehicle.

Place cutting guides on the grille as shown.



STEP 5

Cut the vertical veins as per the cutting guides using a hacksaw.

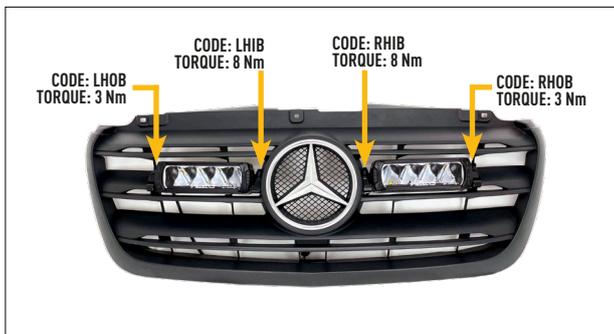

STEP 6

Fix the Grille Mount brackets to both lights as per the diagram shown.



STEP 7

Slide the lights into the grille (outboard first), ensuring the clips on the brackets are secured at the back of the grille.



STEP 8

Drill a 3.5mm hole for each inboard bracket for the self tapping screws as shown.




STEP 9


Secure the lights with a self tapping screw where you have pre-drilled the holes.

WIRING




TRIPLE-R 750 STANDARD

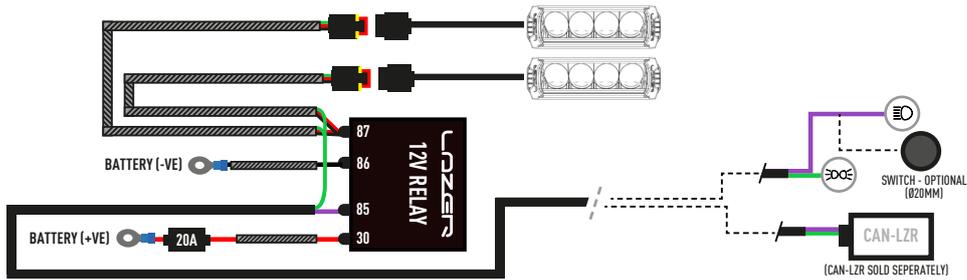

TRIPLE-R 750 ELITE

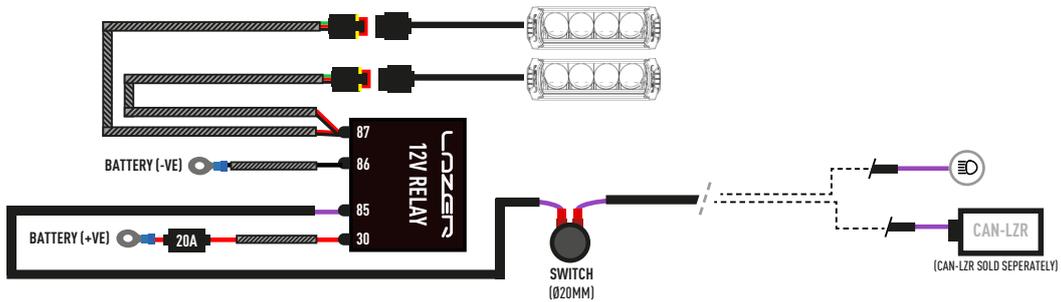

TRIPLE-R - POSITION LIGHT FUNCTION (OPTIONAL)

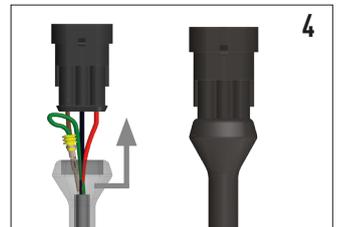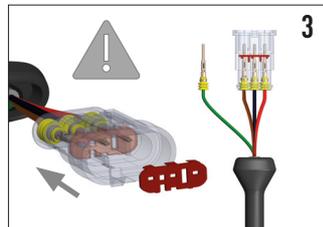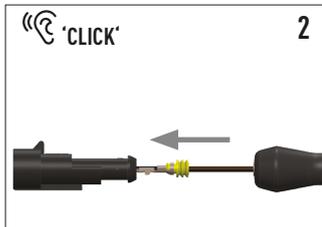



LAZER

HIGH PERFORMANCE LIGHTING

WWW.LAZERLAMPS.COM

+44 (0)1992 677374
sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre,
Riverway, Harlow, Essex. CM20 2FD. United Kingdom



MADE IN THE UK



/LAZERLAMPS



/LAZERLAMPS